


**NOTE: INSTRUCTIONS FOR INSTALLING CHECK VALVES**

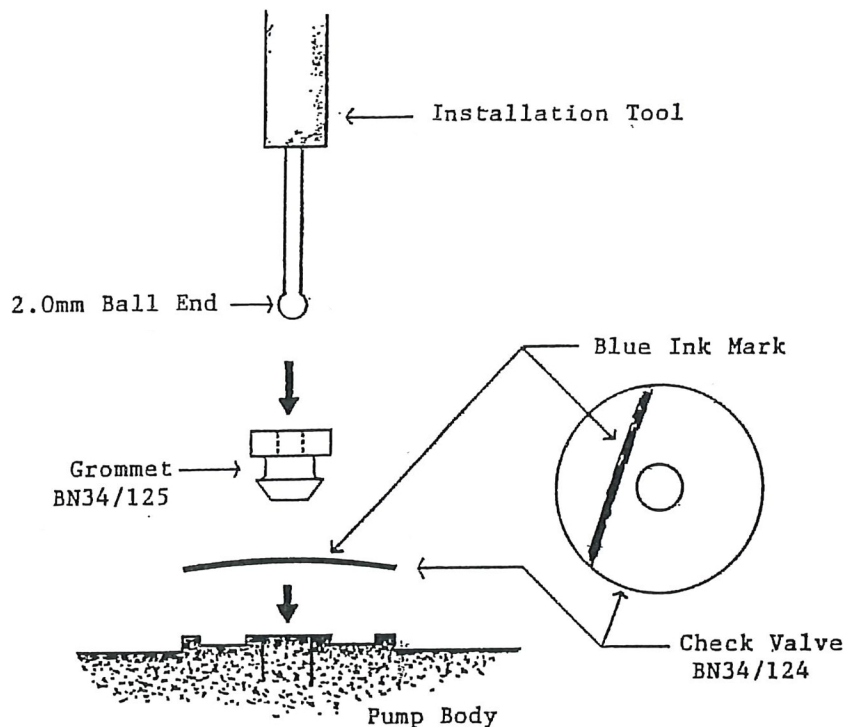

**PROCEDURE:**

1. The check valves (BN34/124) must be installed as shown with the concave side towards the pump body. Failure to do so may result in improper sealing by the check valves. The check valves are supplied by the maker in rolls....this results in the check valves having a permanent "curl". If the curl is not readily discernible, there is also a blue ink mark on each check valve. The side having the ink mark is the side away from the pump body.
2. The use of an installation tool (not included in this kit) will facilitate installation of the grommet. Apply oil to tip of grommet, insert tool end into hole in the head of the grommet, and push in until grommet is properly seated. Repeat above procedure for the other check valve.